A Division of Thiessen Products, Inc.

Instruction Sheet For #2188




INNER CAM BEARING INSTALLATION TOOL

Use on single cam Big Twin 1958-present

Refer to H.D.® Service Manual for removal of cam cover. Use cam cover puller, JIMS® #2243.
Caution: Use only Torrington® bearings, JIMS® #9058.

1. Lube threads, and screw #5 into plate #2. Install cam bearing driver tool #1 by threading it onto the end of screw #5. Push cam bearing tool #4 on end of driver #1.
2. Place cam bearing, letters and numbers out, on end of tool #4. Use a press fit lube on bearing.
3. Install assembled tool (with bearing) onto case using 2 allen screws from cam cover.
4. Lube threads and turn in screw # 5 carefully until bearing starts in bore. Tighten until tool contacts case. This will correctly locate bearing below case surface.
5. Use JIMS® tool #2249 for checking I.D. of bearing and JIMS® tool #2280 for checking cam alignment.

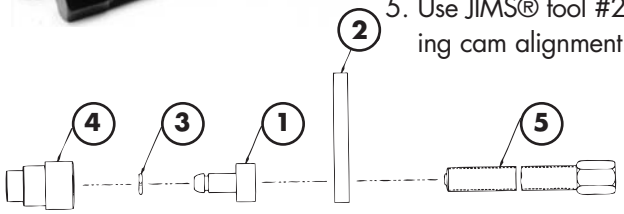

PARTS AVAILABLE SEPARATELY

No.	Qty.	Description	Part No.
1	1	TOOL, DRIVER, CAM BEARING	2190
2	1	PLATE	2188-1
3	1	SOCKET RING	2310
4	1	TOOL, CAM BEARING	97272-60
5	1	SCREW	1024
6	1	INSTRUCTIONS	2188-IS

CAUTION: Wear safety glasses. Excessive force may damage parts! ,See JIMS® catalog for over 100 other top quality professional tools. The last tools you will ever need to buy.

"From the Track... To the Street!"

555 Dawson Drive, Camarillo, CA 93012 • Phone 805-482-6913 • Fax 805-482-7422

No.2188-IS

Rev A
10/12

A Division of Thiessen Products, Inc.

Instruction Sheet For #2188




INNER CAM BEARING INSTALLATION TOOL

Use on single cam Big Twin 1958-present

Refer to H.D.® Service Manual for removal of cam cover. Use cam cover puller, JIMS® #2243.
Caution: Use only Torrington® bearings, JIMS® #9058.

1. Lube threads, and screw #5 into plate #2. Install cam bearing driver tool #1 by threading it onto the end of screw #5. Push cam bearing tool #4 on end of driver #1.
2. Place cam bearing, letters and numbers out, on end of tool #4. Use a press fit lube on bearing.
3. Install assembled tool (with bearing) onto case using 2 allen screws from cam cover.
4. Lube threads and turn in screw # 5 carefully until bearing starts in bore. Tighten until tool contacts case. This will correctly locate bearing below case surface.
5. Use JIMS® tool #2249 for checking I.D. of bearing and JIMS® tool #2280 for checking cam alignment.

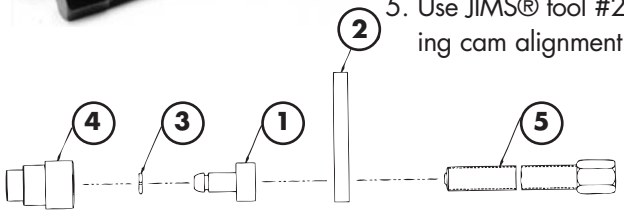

PARTS AVAILABLE SEPARATELY

No.	Qty.	Description	Part No.
1	1	TOOL, DRIVER, CAM BEARING	2190
2	1	PLATE	2188-1
3	1	SOCKET RING	2310
4	1	TOOL, CAM BEARING	97272-60
5	1	SCREW	1024
6	1	INSTRUCTIONS	2188-IS

CAUTION: Wear safety glasses. Excessive force may damage parts! ,See JIMS® catalog for over 100 other top quality professional tools. The last tools you will ever need to buy.

"From the Track... To the Street!"

555 Dawson Drive, Camarillo, CA 93012 • Phone 805-482-6913 • Fax 805-482-7422