



INSTALLATION INSTRUCTIONS FOR 1007-0005 AS CAST CHOPPER DAVE SU AIR CLEANER

1

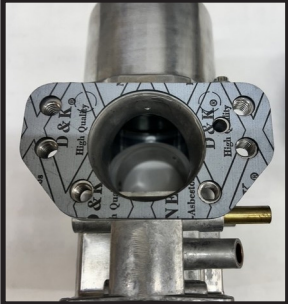

2

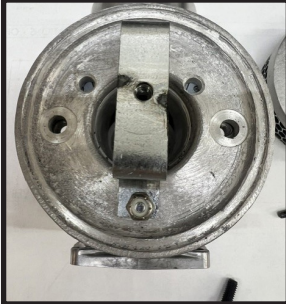

3



1) Place the supplied gasket on the carb and position so the (2) center threaded holes are aligned. 2) Install the A/C backing plate so the holes in the backing plate are aligned with the threaded holes in the carb flange. 3) Place a supplied star washer on both supplied socket buttonhead bolts. Put two drops of blue threadlocker on each bolt. 4) Thread the bolts through the backing plate and into the (2) center holes. 5) Tighten both bolts to the appropriate torque value. 6) Place the A/C element with screens on the backing plate. 7) Now put the outer cover (SU logo facing out) on top of the element assembly. 8) Using the provided stainless steel buttonhead bolt, secure the cover onto the A/C assy. with the appropriate torque value.

4



5



6



7



8



American Prime Mfg. Inc.

8205 Secura Way Santa Fe Springs, CA 90670 U.S.A. ~ www.americanprimemfginc.com